


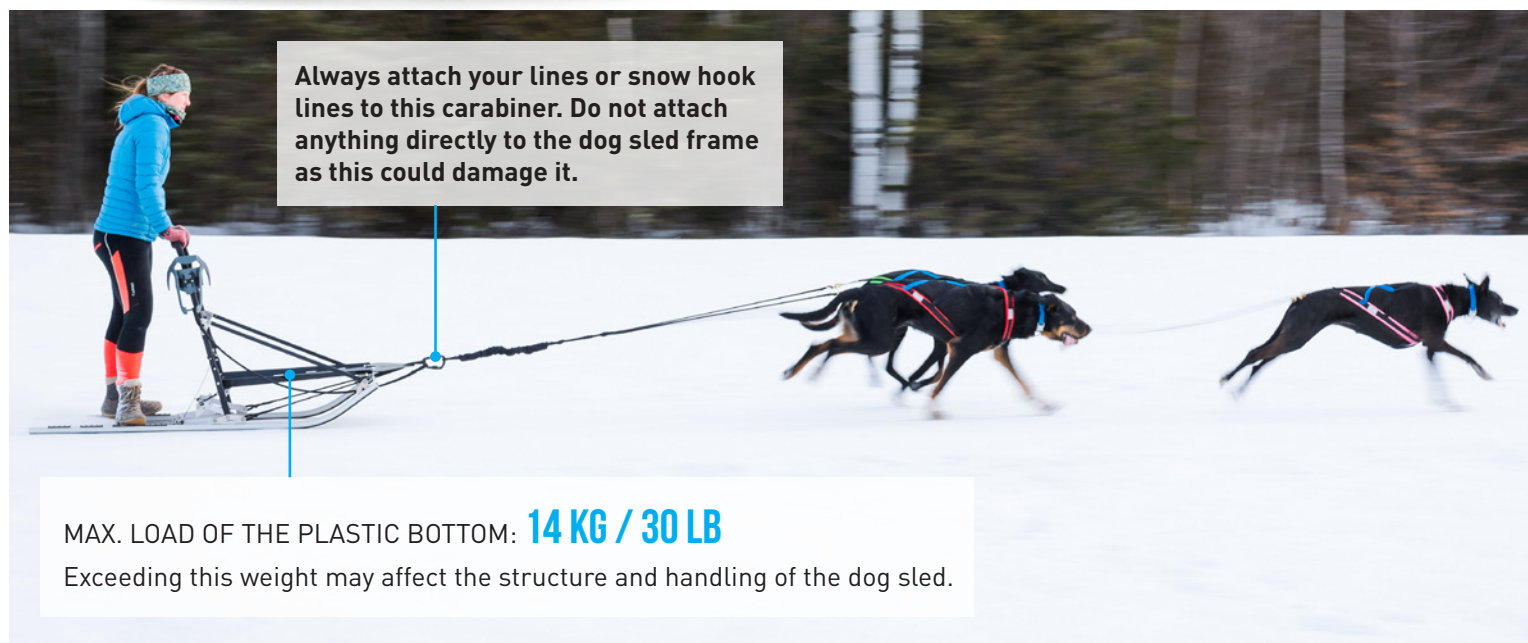

SIGMA DOG SLED



SIGMA DOG SLED FOLDING STEPS

Pull back the **1** 2 pieces of rubber to release the plastic bottom.



Lift up the plastic bottom to make sure that the **2** screws are out of the holes of the frame.

Pull up the **3** latch system and fold the sled backwards.



For the videos explaining how to fold or unfold your SIGMA dog sled:
nahak.ca/mediatheque

MAINTENANCE

The runners are made of HDPE (non-porous plastic), so applying wax to them has no beneficial effect. When the runners are too worn, they are easily replaced thanks to our rail system.